

SUPPORT CAR - PLAY& ANDROID AUTO

Have to add our Adapter



File Name: car multimedia player manual.pdf

Size: 1401 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 4 May 2019, 15:18 PM

Rating: 4.6/5 from 649 votes.

Status: AVAILABLE

Last checked: 12 Minutes ago!

In order to read or download car multimedia player manual ebook, you need to create a FREE account.

[**Download Now!**](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with car multimedia player manual . To get started finding car multimedia player manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

car multimedia player manual

Thank you for purchasing this product. Please read through these operating instructions. Please keep the unit dry. Do not change the fuse on the power supply. Only connect the unit to a 12VDC power source. Please contact your nearest dealer if one is not available. Never install this unit where it will be exposed to direct sunlight or rain. To ensure safe driving, please adjust the rearview mirror before driving. Never use the front video display function. Never expose this unit, amplifier, and speakers to water. FCC Statement: This equipment complies with FCC radiation exposure limits for Class B digital devices, pursuant to Part 15 of the FCC Rules. However, there may be some restrictions on the use of this equipment in certain areas. TV technician for help. FCC Radiation Exposure Statement. This equipment complies with FCC radiation safety precautions. 1. Image playback. 16. Before Using. 4. Front Panel. 4. Remote Control. 5. Notes on Remote Control Usage. 5. Bluetooth Mode. 17. Pairing Bluetooth Enabled Devices. 17. Disconnecting a Bluetooth Device. 17. Make a Call. 17. Receiving a Call. 18. Adjust Bluetooth Settings. 18. Bluetooth Music Function. 18. Basic Operations. 6. Playing Source Selection. 6. Mute. 6. Volume Adjustment. 6. Audible Beep Confirmation. 6. Parking Brake Inhibit. 6. Adjusting Equalizer Controls. 6. Equalizer EQ. 6. Adjusting the Fader and Balance. 7. Accessing iPod mode. 19. Pausing play. 19. Selecting a track. 19. Repeat play. 19. Random play. 19. Search function. 19. About SmartLink. 20. About HDMI. 20. Connect with Android Phone. 20. Connect with iPhone. 20. Setting. 21. Limitations. 21. Basic Operations. 7. Settings. 8. System Settings. 8. General Settings. 8. Calibration. 8. SWC Programming. 8. Audio Settings. 9. Time Settings. 9. Other Modes. 22. Aux Front. 22. Reset. 22. Replace a Fuse. 22. Rear Camera Operation. 22. Settings. 9. Language Settings. 10. Video Settings. 10. Adjust Volume Settings. 10. Settings. 10. Specifications. 23. Radio Mode. 11. Select Radio as Playing Source. 11. Select One Radio Band. 11. Tune. 11. Preset Station. 11. Local radio station seeking. 11. EQ Selection. 12. PTY Function. 12. Troubleshooting. 25. Wire Connections. 26. Playback Mode. 13. Basic information. 13. Insert a disc. 13. Eject a Disc. 13. http://www.bkmm.it/upload_immagini/3x1000-manual.xml

- **car multimedia player manual, car multimedia player manuale italiano, car multimedia player user manual, android car multimedia player operation manual, isudar car multimedia player user manual, android car multimedia player operation manual ad-003a, android car multimedia player manual, isudar car multimedia player manual, 1.0.**

Touch Screen Controls. 13. Controlling Playback. 13. Connecting the USB Device. 13. Removing the USB Device. 13. Inserting the SD card. 13. Removing the SD card. 14. DVD movie playback. 14. Audio playback. 14. Video playback. 15. Front Panel. The graphics in this manual are for reference purposes only and may not match the actual unit. Press to eject a disc. Press to display the main menu. Rotate to adjust volume. Press again to resume normal sound. Press and hold to turn the unit OFF. Adjust the brightness of screen. Remote Control. Preset station 5. If the remote control does not work, replace the lithium battery. When the range of operation of the card is limited, the range will be reduced. Volume Adjustment. Playing Source Selection. Audible Beep Confirmation. To increase or decrease the volume level, turn the volume knob. The volume range is 0 to 100. An audible beep tone confirms each function. Parking Brake Inhibit. When the "BRAKE" wire is connected to the parking brake function is overridden when the parking brake inhibit is active, the "BRAKE" function is disabled. For Your Safety", preventing the rear video screens from being affected. Adjusting Equalizer Controls. The Equalizer adjustment screen allows you to adjust the audio output. For example proper setting of the audio output. Mute. Press the volume knob on the front panel. Press again to display the main menu. Equalizer EQ. Subwoofer. This feature is used to reduce or increase the audio output. The equalizer will automatically change to the "AUTO" setting. Adjusting the Fader and Balance. Balance. This feature is used to balance the audio output. Fader. This feature is used to fade the audio output. The setting can also be changed by touching the touch screen. System Settings. General Settings. General Settings Options. Radio

Region. Distance. Radio Range. Local. Beep. Key Color. Calibration. ShortcutDescription. Select one that matches your location. Select Local to receive only stations with extremelyTurnON the beep sound. Each time you press a button,Off. TurnOFF the beep sound. Choose the backlight color of the buttons. Start. Calibrate the touch screen. Set the shortcut. Enter to SWC interface. Restore to default settings. On.<http://www.gartenstadt-apotheke.com/userfiles/3ym30-service-manual.xml>

When the touch operation is not sensitive or valid, you shouldAdjust the response positions of the touch panel as followingsSWC Programing. The following controls are available for most vehicles. Home. Mute. Preset . NextPrevPlayUp to 12 steering wheel control functions can beNot all functionsA check mark should appear corresponding to the numberFor example, if. You will thenAudio SettingsAudio Settings. Options. Subwoofer. OffSubwoofer Filter 120HzOn. Loudness. Off. Description. Turn On the subwoofer. Turn Off the subwoofer. Select a crossover frequency to set a cutoff frequency for the subwoofer's LPFTurn On the loudness. Turn Off the loudness. Time SettingsTime Settings. Date. Clock Format. Time. DescriptionLanguage SettingsLanguage Settings Description. OSD Language. Select onscreen display language. DVD Audio. Select DVD audio language. Options available depending on DVD disc. DVD Subtitle. Select DVD subtitle language. DVD Menu. Select DVD menu language. Video SettingsVideo Settings. Aspect Ratio. Parking. Password. Rating. Adjust. Version Info. Full. Adjust aspect ratio. Normal. Disable video when driving. Enable video when driving. Set password to restrict the play of discs. The default password is 0000.Acceptable for adults only. Enter. Display the current version information. Adjust Volume Settings. You can set different volumes for different sources.When switching to the source, the volume increases automatically.Select Radio as Playing Source. Tune. Auto Tuning. To stop searching, repeat the operation aboveManual Tuning. Method 1During manual tuning, the frequency will beNumeric keyboard is displayed, touchEnter frequency directly.The unit has 5 bands, such as FM1, FM2, FM3, AM1, AM2, and each band can store 6Search Stations AutomaticallyManual StoreRecalling a StationSelect One Radio Band. Local radio station seekingFM3, AM1 and AM2. When the Local function is on, only radioTA Traffic Announcements Identification.

Radio announcements on traffic conditions. When TA function is turned on, the TAWhen traffic announcement is received, theAMS function can only be received or savedWhen the Local function is active, the "Local"EQ Selection. RDS Basics. RDS Radio Data System transmits data toRDS service availability varies with areas. Please understand if RDS service is notPTY FunctionTo view more PTY options, touch the scroll barNews, auto search for next available PTYAF Function. AF Alternative Frequency When the radioAF On AF function is activated. AF Off AF function is disabled. Remark AF indicator on LCD will flash until. RDS information is received. If RDS serviceCT Clock Time. Some stations broadcast the time and dateThe clock time. Stations broadcasting close to time zones mayTA Function. Some RDS FM stations periodically provideTP Traffic Program Identification. Broadcasting of traffic informationBasic information. D Time display. E Display onscreen control menu. This system will play the following types ofThe car sound system can be used to playControlling Playback. To access the onscreen controls, touch theIn addition, you can view movies and imagesConnecting the USB Device. For safety reasons, the playback of movies andPlay starts automatically.Touch Screen Controls. Removing the USB DeviceSome burnedInsert a disc. Upon inserting a disc, the unit will switch to. Eject a DiscThe touch key areas for DVD playback areInserting the SD cardPlay starts automatically.A Return to the main menu. B Disc typeRemoving the SD cardDVD movie playback. The car sound system can play video DVDsThe DVD menu is displayed. You can navigate in the DVD menu byAfter starting the movie via the menu of the. DVD, the movie is displayed. The playbackThe playback menu is shown.Select the desired source via the main menu. The device changes to the desired source andIf the playback does not start with the audioSelect the desired source via the main menu.

The device changes to the desired source andIf the playback does not start with the videoIf you

selected a movie, the playback is started. During the movie playback, the playback menu is shown. After starting a title, the playback menu is shown. The user can make or receive phone calls. Bluetooth enabled device. BT radio. Pressing the "Waste bin" icon next to Enabled Devices. To connect your Bluetooth phone to the unit, Pairing needs only to be done once. The user can search for Bluetooth head units or details, see the "Adjust Bluetooth Settings" section. Make a Call if you have many Bluetooth capabilities of the device. Bluetooth device can reduce the operational Disconnecting a Bluetooth Device Or touch the number pad directly, then touch Receiving a Call. Bluetooth Music Function. By default, all incoming calls are received Speak into the Bluetooth microphone. Bluetooth provides an Advanced Audio Distribution Profile A2DP profile for streaming. The unit allows In the options menu for Bluetooth, you can The options menu is displayed. Control Profile. Mobile phones supporting Bluetooth audio player. The unit can control a Bluetooth audio player Profile AVRCP. Bluetooth audio players or. Bluetooth adapters compatible with these While listening to music from any source, the The unit will If there is an incoming phone call, the music Bluetooth To turn the "Bluetooth" function. ON or OFF. Auto Connect To turn the "Auto Connect" Auto Answer To turn the "Auto Answer" Pin Code To set the pairing code. Phone Synchronizing To synchronize phone book.

Synchronizing may take several minutes to load on Apple is not responsible for the operation of this device or its compliance with safety and Please note that the use of this accessory with iPod or iPhone may affect Accessing iPod mode. Fast forward. Fast backward. Connect an iPod or iPhone to the USB Repeat play. This function allows you to play the track Repeat all. Random play This function allows you to play all tracks Pausing play Search function Selecting a track. Trackup Trackdown Connect with Android Phone. Open the Source Menu and then touch Smartphone and this system via BT. Click About SmartLink. SmartLink is the function about interconnecting By SmartLink, you can synchronize the screen And you can also control your phone by the car The function of the SmartLink depends on the Connect with iPhone Touch" setting option. HDMI cables sold separately. A circle will be shown on the screen of Assistive Touch, set the below options as About HDMI. To activate the SmartLink function, you need to HDMI connector via appropriate cables sold HDMI High Definition Multimedia Interface Zoomed. Setting Screen Rotation iPhone only. Select Version Displaying the device version. Limitations. Off or in inappropriate operation. SmartLink. SmartLink can't work without available The dpi of phone may cause little deviation Replace a Fuse. Aux Front If there is no power, the fuse may be damaged RCA connectors located on the back of the Rear Camera Operation. This unit is "camera ready." Before accessing When the camera is installed, the rear view When leaving reverse gear, the unit displays Reset. When the unit hangs up, you can reset it, press. Reset General. Reference Supply Voltage. 12VDC. Operating Voltage Range. 10.8 16.0VDC. Max Operating Current. 1.5A. Grounding System. Negative. Dimensions WXHXD. 178.5X101.5X166.0mm. Weight main unit. 1.8kg Distortion. 1.0%. Stereo Separation 1KHz. 25dB. Antenna Impedance. 75 Ohms Screen size. 6.2 inches 169. Display resolution. 800X480. DVD Player. Maximum Output Power. 480W. Load Impedance.

4 Audio Input Level. 0.5V. Preout. Output Impedance. 10K Ohms Output Level. 3V. Video. Video Input Impedance. 75 Ohms Video Output Impedance. 75 Ohms Environment. Notice. When the unit is operated to extremes, such as with maximum power output for a long time, Supported Formats. Unsupported Formats For example, Word documents.doc or Mp3 files with Supported MP3 Disc Format. Supported Video Formats Region Code. According to DVD sales regions, the whole world is divided into six regions. A DVD disc can be Region 2 Japan, West Europe, North Europe, Egypt, South Africa, Middle East. Asia. West Asia. Region 6 China, Mainland. Precautions when using Discs Use a dry, soft cloth to wipe the disc from center to edge, only neutral detergent can be used. If such a disc

isWhat appears to be a problem is not always serious. Please check the following points beforeProblem. Unit does not power on. Poor sound quality orCause. General. Corrective action. Unit fuse blown. Install new fuse with correct rating. Car battery fuse blown. Illegal operation. Reset the unit. Improper audio output connection. Check wiring and correct. Volume set too low. Increase volume level. Speakers damaged. Replace speakers. Adjust the channel balance to centerHeavily biased volume balance. Speaker wiring is in contact with metal part Insulate all speaker wiring connections.Pirated disc is in use. Use original disc. Speaker power rating does not match unit. Wrong connections. Speaker is shorted. TelMute malfunction. Unit resets itself whenMUTE wire is grounded. Incorrect connection between ACC andCheck wiring and correct. Warning information isParking break wiring is not correct. The color system of DVD disc does notPirated disc is in use. Adjust the color system of the DVDUse original disc. Video cable damaged. Replace cables. Improper video signal connections. Flashing image orDisc playback. Cannot insert disc. Disc does not play back. PBC cannot be usedRepeat or searchVCD playback. A disc is already inside the unit.

Eject current disc and insert new one. Disc is warped or scratched.